


8inch Foldable Electric Scooter User manual

(Thanks for choosing our product. Have fun with this electric scooter)

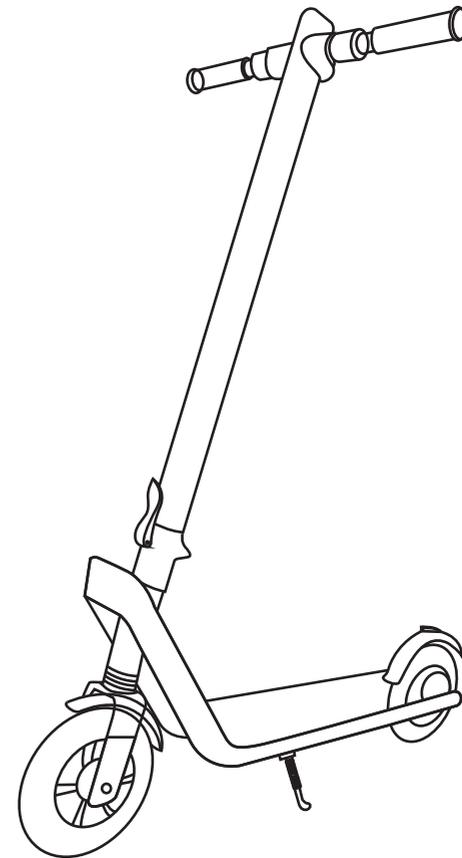

CONTENTS

The Device & Accessories.....	02
Functions.....	03
Folding	04
Charging.....	04
Learning to ride	05
Safety Instructions.....	07
Safety Notifications.....	11
Transportation.....	12
Daily Maintenance and Storage.....	13
Adjusting the brake disc.....	14
Adjusting the front bar.....	14
Specifications.....	15
Content of toxic elements.....	16
Warranty.....	16
Common Failure and Solutions.....	17
Non-warranty.....	18

1. The Device & Accessories

Scooter Picture :



Accessories:

Socket head wrench




Charging adapter



Please check the box about all those accessories showing above with manual

2. Functions and instructions

Product Layout

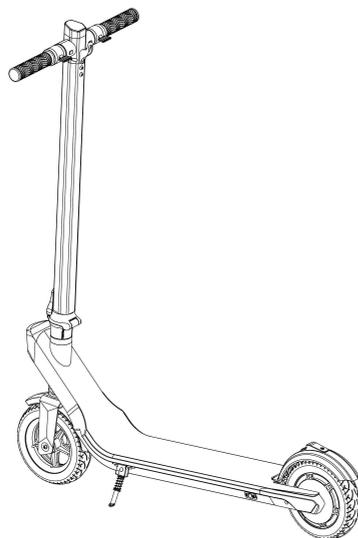


The Control Panel




- 1) Current Speed display: showing the running speed while riding.
- 2) Battery indicator: The battery light status will change from right to left: 5 sections on indicating battery between 86 to 100%; 4 sections on indicating battery between 71 to 85%; when the battery used up, all lights are extinct and the scooter will slide to natural stop by inertia. Then time to recharge.
- 3) Power switch: Press and hold the right button three seconds to turn on the unit. Press and hold the button again for two seconds to turn it off.
- 4) Gear switch: tap the left red button to change the gears. There are four gears; P1, P2 and P3.
- 5) Lighting: to turn the lights on or off, tap the right button quickly, Once for on then again for off.
- 6) Setting: Press and hold both the left and right buttons to enter setting mode, in the setting mode, press the left button to switch between the start up and cruise control modes.
 - a) Unit settings: Switch to mode C1 in the setting mode: Tap the left button to switch between KMH and MPH.
 - b) Start mode setting: Switch to mode C2 in the setting mode: Tap the left button to set the start mode of the scooter (slide start/zero start)
 - c) Cruise Control setting: Switch to mode C3 in the setting mode: Tap the left button to turn cruise control on/off.

3. Folding the scooter:

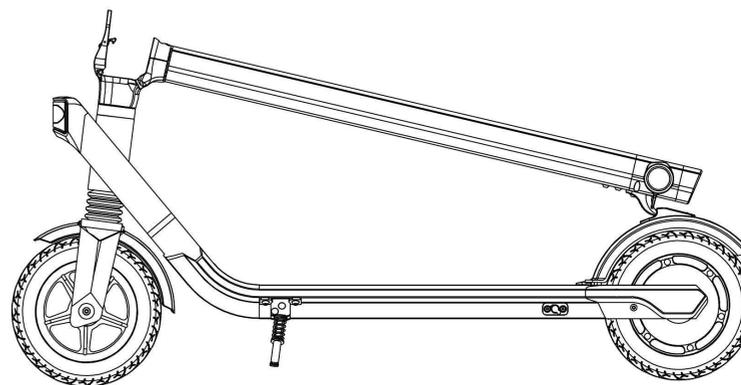



4. Charging the scooter:

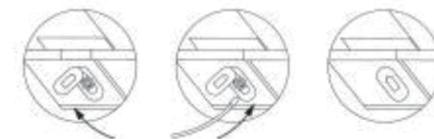

Open the cover connect the charger close the cover


5. Learning to ride

Please wear helmet and knee pads when practice

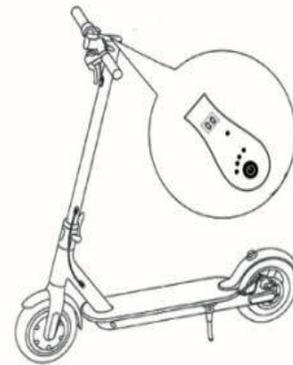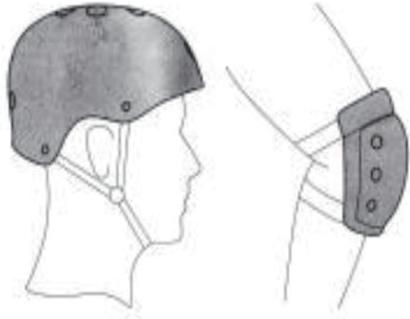


1 Turn on the power and check the power indicator

2, Stand on pedal with one leg, hit the ground with the other leg

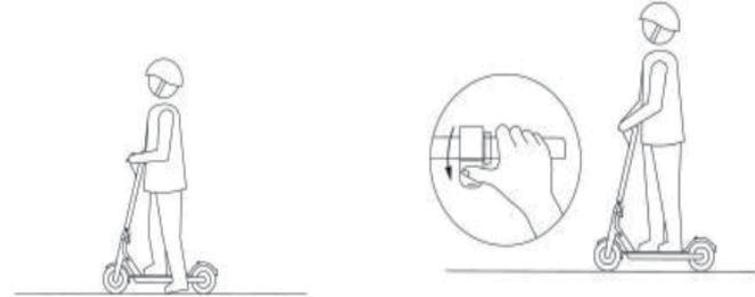


3, Step on the other leg when the scooter is moving, then press the accelerate button (only accelerate when the scooter speed is beyond 5km/h)

4. loose the accelerate button when slow down. Energy recovery systems will open itself to slow down. Press the left disc brake tightly if want to brake urgently.

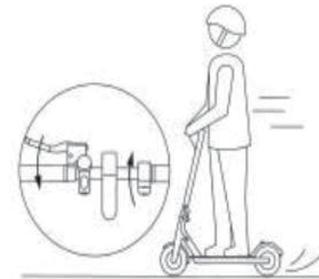

5. lean your body left slightly to turn left, lean your body right slightly to turn right. And turn the handlebar slowly

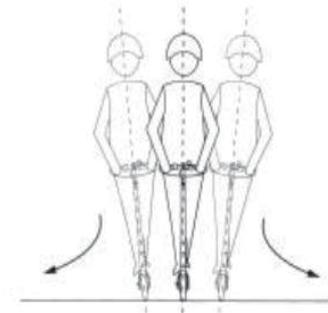


6. Safety Instructions

Avoid security risks



⚠ Please avoid riding in the rain


⚠ Encounter deceleration zone / elevator threshold / potholes and other unconventional road pavement, please do not pass at high-speed. Encounter rough road, please keep in the low speed (5-10km / h). A slight kneeling allows you to better adapt to the complex road

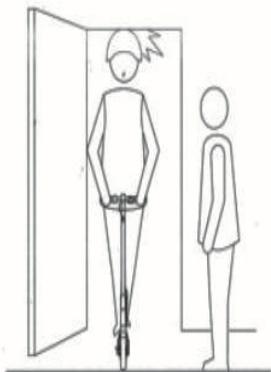

⚠ To avoid the head hit the door frame, elevators and other obstacles



⚠ Do not accelerate at downhill

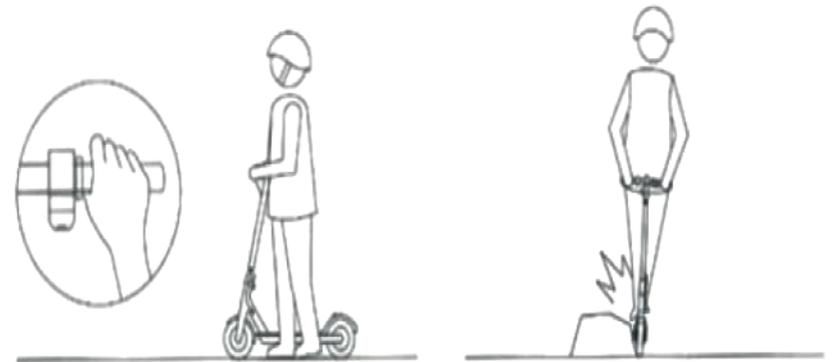


⚠ Do not press the throttle when walking the electric scooter

⚠ Please avoid obstacles to ride




Do Not hang heavy objects such as backpack on the handlebar.
Do Not ride scooter with one foot up


Dangerous Riding is not allowed

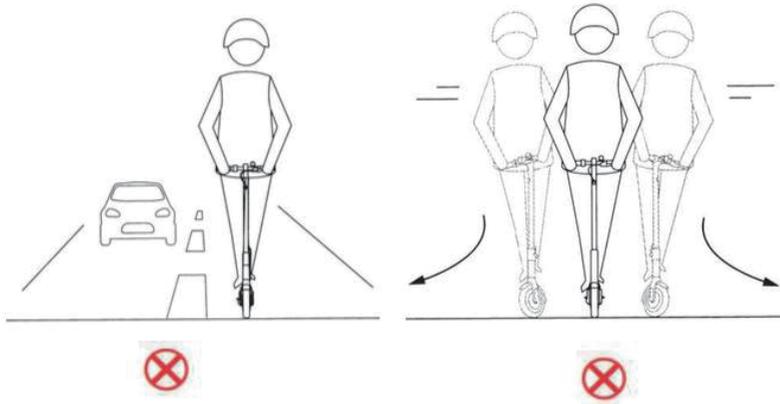


Do not ride the scooter into the motor lane or ride it in high speed!
 No Sharp turn allowed in the residential area or passing with a large group

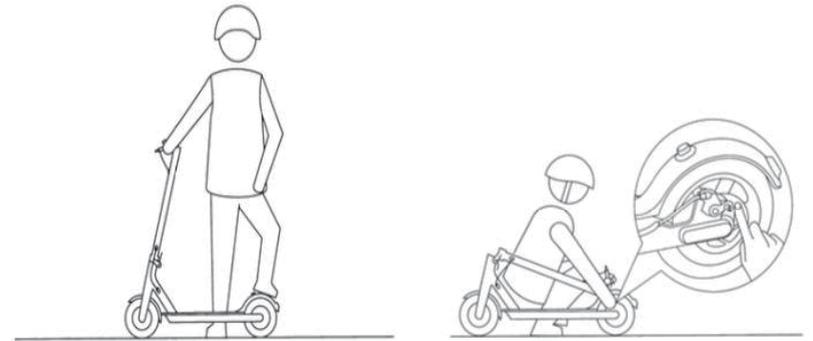

Do not tread the back of the fender **Do not touch the disc brake**

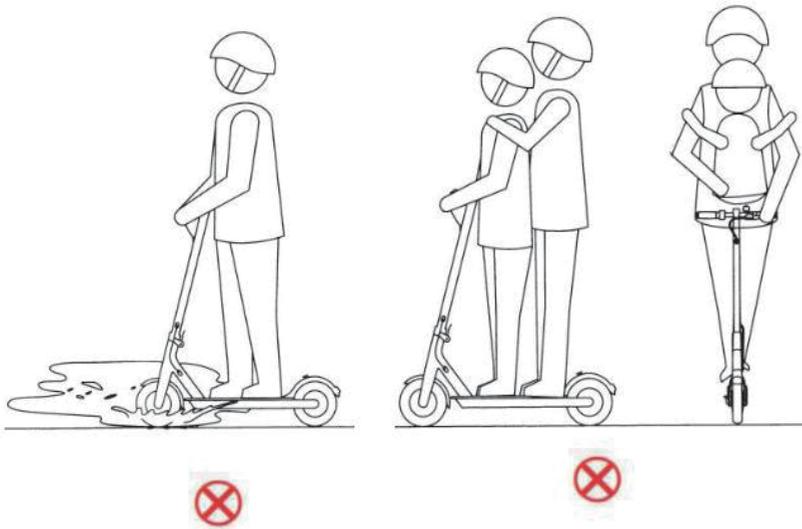

Do not ride the scooter into water exceeds 2cm in depth.
 Never ride the scooter more than one person or holding a child in your arms!

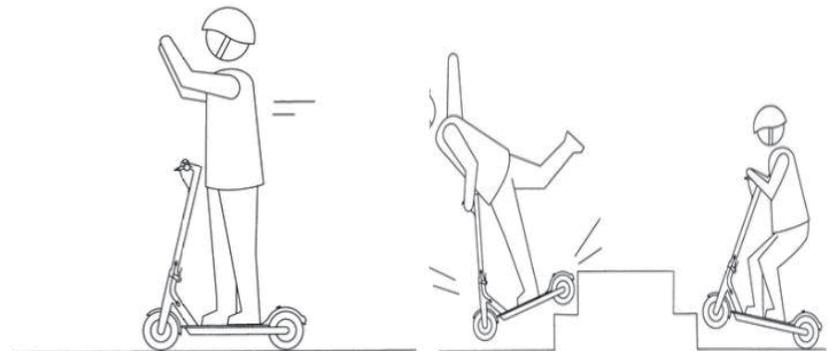


Do not driving leaving your hands **Do not riding electric scooter up, down steps or jump over obstacles**

7.Safety Notifications:


- 1)The electric scooter is not a motor vehicle but once you are driving into a public area, you must obey the public regulations and understand riding into the public would bring risks for you and others of injury. Read this user manual carefully before you drive it.
- 2) Comply with all safety instructions while riding in the public area. Never forget there is a possibility of collision due to the violation of pedestrians or vehicles traffic rules. Improper operation will cause a risk of injury. Like any other kind of vehicle, the higher speed you are riding, the bigger distance you need for braking. Emergency braking may cause slippery on the smooth or wet road. Therefore, always keep a appropriate speed while you are riding this scooter, always keep s safe distance from pedestrians and passing vehicles, pay more attentions on those road that you are not familiar.
- 3) Always respect the rights of pedestrians, do not scare them especially the children, while passing them, reduce your speed. For the right-hand traffic countries: if you are moving in the same direction with the pedestrians, stay in the left side of the road as much as possible; if you are moving in the opposite direction, stay to the right and slow down.
- 4) Follow the Driving Regulations & Safety Instructions in your country. Violation of those rules may result in fines, personal injury or serious traffic accidents, legal disputes, conflict or any other unpleasant situations. Our company does not bear any those directly or un-directly lost or injury liability.
- 5) Do not borrow this scooter to others who does not know how to ride for avoiding personal injury. Must take some time to train him/her if you want to as well as require them to wear the proper safety gear.
- 6) Check the scooter carefully before you ride on it. If you find parts broken, battery life has decreased obviously, flat tire or abnormal sounds or symptoms. STOP riding immediately and check or repair it first.

8.Fold and transportation:

Make sure the scooter is off and open the folding wrench in the front bar like picture showing above. Dip down the front bar to the hook in the rear fender and tie it up. When you want to use it the scooter again, just simply release the hook and lift the front bar up and lock the wrench again.

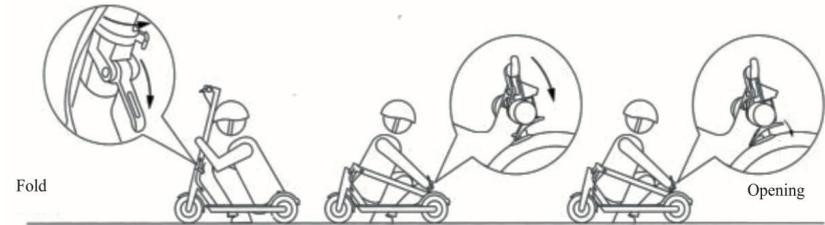

Transportation:

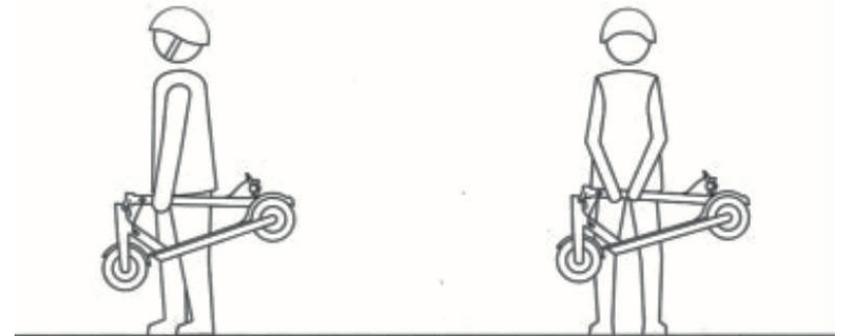

After folding, carry the front bar with one hand or both hands to transport

9. Daily Maintenance and Storage

Clean the electric scooter

If you see any stains on this scooter surface, use a soft cloth to wipe it off. If the stain still there, then you can use the toothpaste and a toothbrush to clean it and wipe it off with the soft cloth again.

If you find scratches on the plastic parts, use the sandpaper or grinding materials for polishing.

Warning:

A) Do not use alcohol, petrol, kerosene or other corrosive and chemical material to clean the scooter, otherwise, it will cause serious damage to the scooter body and even disrupt the internal functions.

B) Do not wash the electric scooter under a strong pressure of water, make the scooter is off while cleaning.

C) Insert the plug back after charging the scooter, or you may get an electric shock or during the cleaning the water may falling into to the charging port and cause the serious damage of the scooter.

2) Storage the electric scooter

If you do not use the scooter, storage it in a dry, cool place and do not leave it in the street for a long time.

Leave the device under the extremely high or low temperature can shorter the life of the electric scooter or reduce the battery life.

Maintenance of electric scooter battery.

Do not use the batteries from the other factory to avoid the dangerous situation.

Do not disassemble the battery to prevent the electric shock. Avoid contact with metal objects to prevent an occurrence for a short-circuit. Otherwise the battery may have malfunction or can injure the user.

It is recommended to use the home adapter that comes in original device to prevent accident or fire of the scooter.

Improper disposal of used batteries will cause severe environment pollution. Please dispose the battery according to the local laws, do not dispose it with the food waste and protect the environment together.

After each use of the device, charge the scooter would prolong its life

Do not storage the scooter battery with any places with temperature higher 50°C or lower than -20°C (For example, do not leave the scooter in the trunk in summer time). Do not leave the scooter near the fire, and all those actions may cause inflammation.

If you don't use the scooter within 30days, then charge the battery and keep the device in a cool and dry place. Then you need to charge it every 60days, otherwise, it might cause failure, which is not included in warranty services.


Avoid fully discharged the device for prolong the battery life. Using the device in normal room temperature, the range will be bigger and the performance is better. If you use the scooter at the temperature below 0 °C, the range and performance will be decreased.

At -20°C, the range is less than the scooter in normal temperature or even half, if the temperature rises, the range will also increase. You can check the remained range in the APP.

Note: Fully-charge scooter standby time is 120 to 180 days, the battery has a smart-chip to monitor the charging and discharging information. If you are not changing the battery for a long time, it will cause the batteries die directly. Such kind of damage is not included in the warranty services.


(Caution: Do not disassemble the device by the unauthorized person, this might cause electric-shock or serious injury from the short-circuit.)

10. Adjusting the brake disc

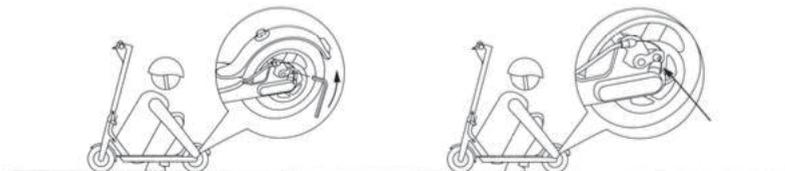

If you feel the brakes are too tight, use the M5 hex wrench counterclockwise to release the plate screws on the disc, slightly shorten the tail brakes cable then lock it up with plate screws; If you feel the brakes are too loose, release the plate screws and slightly extend the tail brakes cable to the tail side and tighten the screws again.

11. Adjusting the front bar

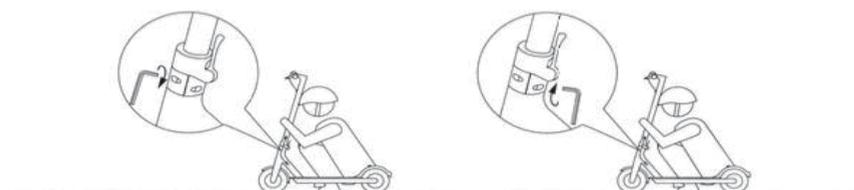

If the front bar is shaking, use the M5 hex wrench to lock the two screws at the folding mechanism.

12. Product Detailed Specification:

Specification	
Foldable:	YES
Tire Size:	8inch
Controller:	Brushless controller
Motor power:	350W
Brake form	electronic brake, fender brake
Minimum load :	25KG
Max load:	120KG
Max speed :	25KM/H
Max. Climbing Angle:	15°
Terrain clearance :	9cm
Range of tires:	Solid tyre
Headlamp:	YES
led tail lamp:	YES
Battery type:	36V 4Ah-7.8AH
Range Per Charge:	12-25KM
Charger Voltage :	110V~240V 50-60Hz
Charging Time:	3-4h
Voltage:	36v
Working Temperature:	-10°C-40°C
N.W.:	11KG
G.W.:	14KG
Range of tires:	Solid tyre
Product size folding before (L*W*H)	98*46*114cm
After the product dimensions are folded (L*W*H)	98*19*47cm
Package Size:	112*16*52cm
Material :	ABS+PC
Accessories :	Standard Charger, Giftbox, User Manual
Color:	Black, white
Certification:	CE/ROHS/FCC

Remarks:

Body Height: The distance from ground to the top of the its body.

Range test conditions: 75KG riding in a speed 15KM/H in 25 degree Celsius. Range can be varied due to the load, temperature, wind speed and operating habits.

13.Name and Content of Toxic or Harmful Elements of the scooter

Name	Toxic and Harmful Elements					
	Plumbum (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr 6+)	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Charger	X	0	0	0	0	0
Battery	X	0	0	0	0	
Extended air-connector	X	0	0	0	0	0
Charging Port	X	0	0	0	0	0
PCBA Mother Board	X	0	0	0	0	0
Meter PCBA	X	0	0	0	0	0
Motor	X	0	0	0	0	0
Metal Frame	0	0	0	0	0	0
Tire	0	0	0	0	0	0

. Above table is made according to the regulation of SJ/T 11364.

O means the content of such kind of element is below the standard base on GB/T 26572.

X means the content of such kind of element is above the standard base on GB/T26572.

Warranty Policy

This scooter is strictly offer the after-sales service base on the Consumer Protection Law and Product Quality Law of China.

We offer 1 year warranty of main body of the scooter including the frame, motor, controller, handlebar, meter platform, rear wheel, brake disc, folding mechanism, brake cable, and front fork.

Accessories like battery and home adapter offer 6 months warranty. The fender, tires, bell-set rear taillights foot pad, decorative cover etc frequently contact part will be offer 3 months of warranty.

Free coming gift like hex wrench or extended air connector there is no warranty.

13.Common Failures and Solutions:

1)The display board is working but the motor doesn't work.	
Reason analysis	Solutions
a.The break handle is damaged	a.Pull out the socket of the break handle (normally open type brake handle), if the motor works, then it is the failure of break handle, should replace the break handle.
b.The speed regulating steering handle is damaged	b. Firstly check the speed regulating steering handle and motors' hall switch are short circuit or not. Generally it is easier to cause the joint short circuit after rain affected with damp, so notice the short circuit of steering handle and the motor hall switch. Otherwise there will be a continuous damage of the replacement controller!
c.The motor is damaged	c.If the motor doesn't turn, please inspect the motors' hall switch and turning handles' signal. Once the power-on, the controller shell is very hot, generally it is short circuit of the controller internal power tube, should immediately cut off the power.
2)Charging doesn't work	
Reason analysis	Solutions
a.The battery charging port is loose	a.Change a good charging port
b.The connection of the charger plug is not well	b.Change a good charger connector.
3) Can't turn on the scooter	
Reason analysis	Solutions
a.The battery is dead	a.Charge the scooter for 1-2 hours according to the user manual.
b.The power button is out of order	b.Check the power button which has got stuck or not.

14.Non-warranty regulations:

Unauthorized repair, malfunction, collision, negligence, abuse, infusion, accident and alteration, or any kind of improper use of the product accessories cause the result of damage of the unit itself.

Beyond the warranty time

Any damage caused by the force majeure.

Any man-made reason cause the damage.

If the product is used for the commercial use, it is not guaranteed.



Warnings (English):

- There are risks during the usage of this product. Do wear helmet, knee pads, elbow pads and other protective gear;
- Ride at proper speed and be aware of potential hazards;
- Check the air pressure on the tires, brakes and the fold and unfold mechanism before each ride;
- Grip the handlebars with your hands and pull back 2-3 times to test whether the folding mechanism is firmly locked;
- Hold the handlebars with both hands while riding, otherwise you may be injured by losing balance. Do Not ride on one foot;
- Pay attention to obstacles while riding, avoid collision;
- Ride at low speed on unconventional roads such as speed bumps;
- Reduce the speed and brake if needed to control the speed when going downhill;
- Use the scooter only on flat roads;
- The faster you ride a scooter, the longer the braking distance you need. Start braking on time and don't take any risk;
- Do NOT use the scooter off-road;
- DO NOT ride in the rain, wet ground, fog or slippery weather;
- DO NOT hang heavy objects on the handlebars;
- DO NOT ride more than one person (including children);
- DO NOT step on the folding mechanism during riding;
- DO NOT ride on steps or obstacles or do stunts during riding;
- DO NOT touch the front wheel motor, as it may get very hot after riding;
- DO NOT press the gas pedal / accelerator button while walking;
- Obey all local traffic and scooting laws and regulations;
- CHECK LOCAL LAWS REGARDING SCOOTER USE. Check local laws and regulations to see where and how you may use your scooter legally. DO NOT ride on motor vehicle lane or even highway;
- DO NOT open and puncture the battery case to avoid the risk of short circuit caused by metal objects touching the battery contacts;
- Do not open or replace any part. In case of problems or need for repair or maintenance, consult your sales agent;
- Only use the original power adapter to charge, otherwise there is damage or fire risk;
- Improper disposal of used batteries may pollute the environment. Observe the local regulations for disposal of batteries;
- DO NOT place the battery in a high temperature or low temperature environment. DO NOT put the battery into the fire. Otherwise, the battery may fail, overheat, catch fire, or even explode;
- Charge the battery of the scooter fully before your store it for a long period. Charge the battery fully at least once in 90 days if the scooter is not used and stored;
- Operating Temperature: -10° up to 40°. Storage Temperature: -20° up to 50°;
- DO NOT wash the scooter with any kind of liquid.



Warnungen (Deutsche):

- Während der Verwendung dieses Produkts bestehen Risiken. Tragen Sie einen Helm, Knieschützer, Ellbogenschützer und andere Schutzausrüstung;
- Fahren Sie mit angepasster Geschwindigkeit und achten Sie auf mögliche Gefahren;
- Überprüfen Sie vor jeder Fahrt den Luftdruck auf den Reifen, die Bremsen und den Ein- und Ausklappmechanismus;
- Ziehen Sie den Lenker mit Ihren Händen 2-3 Mal zurück, um zu testen, ob der Klappmechanismus fest eingerastet ist;
- Halten Sie den Lenker während der Fahrt mit beiden Händen fest, da Sie sonst durch Gleichgewichtsverlust verletzt werden können. Fahren Sie nicht auf einem Fuß;
- Achten Sie beim Fahren auf Hindernisse um Kollisionen zu vermeiden;
- Fahren Sie mit angepasster Geschwindigkeit über unebene Fahrbahnbeläge;
- Reduzieren Sie die Geschwindigkeit und bremsen Sie bei Bedarf, um die Geschwindigkeit bei Bergabfahrten zu kontrollieren;
- Verwenden Sie den Roller nur auf ebenen Straßen;
- Je schneller Sie mit dem Roller fahren, desto länger ist der benötigte Bremsweg. Beginnen Sie rechtzeitig mit dem Bremsen und gehen Sie kein Risiko ein;
- Verwenden Sie den Roller NICHT im Gelände;
- Fahren Sie NICHT bei Regen, nassem Boden, Nebel oder rutschigem Wetter;
- Hängen Sie KEINE schweren Gegenstände an den Lenker;
- Fahren Sie NICHT mit mehreren Personen auf dem Roller;
- Treten Sie während der Fahrt NICHT auf den Klappmechanismus;
- Fahren Sie NICHT auf Stufen oder Hindernisse. Machen Sie KEINE Stunts;
- Berühren Sie NICHT den Vorderradmotor, da dieser nach dem Fahren sehr heiß werden kann;
- Drücken Sie beim Gehen NICHT das Gaspedal;
- Befolgen Sie alle örtlichen Verkehrsgesetze und Bestimmungen;
- PRÜFEN SIE DIE LOKALEN GESETZE IN BEZUG AUF DIE VERWENDUNG VON SCOOTERN. Überprüfen Sie die örtlichen Gesetze und Vorschriften, um festzustellen, wo und wie Sie Ihren Roller legal verwenden dürfen;
- Öffnen und durchstechen Sie das Batteriegehäuse NICHT, um das Risiko eines Kurzschlusses durch Metallgegenstände zu vermeiden, die die Batteriekontakte berühren;
- Öffnen oder ersetzen Sie keine Teile. Bei Problemen oder bei Bedarf an Reparatur oder Wartung wenden Sie sich an Ihren Händler;
- Verwenden Sie zum Laden nur das Original-Netzteil, da sonst Beschädigungen oder Brandgefahr bestehen;
- Eine unsachgemäße Entsorgung gebrauchter Batterien kann die Umwelt verschmutzen. Beachten Sie die örtlichen Vorschriften zur Entsorgung von Batterien;
- Stellen Sie den Akku NICHT in Umgebungen mit hohen oder niedrigen Temperaturen auf. Legen Sie den Akku NICHT ins Feuer. Andernfalls kann die Batterie ausfallen, überhitzen, Feuer fangen oder sogar explodieren;
- Laden Sie den Akku des Scooters vollständig auf, bevor Sie ihn längere Zeit aufbewahren. Laden Sie den Akku mindestens einmal in 90 Tagen vollständig auf, wenn der Roller nicht benutzt und gelagert wird;
- Betriebstemperatur: -10 ° bis 40 °. Lagertemperatur: -20 ° bis 50 °;
- Waschen Sie den Roller NICHT mit Flüssigkeiten.



Avertissements (Espagnol):

- Existen riesgos durante el uso de este producto. Use casco, rodilleras, coderas y otros equipos de protección;
- Conduzca a la velocidad adecuada y sea consciente de los peligros potenciales;
- Verifique la presión de aire en los neumáticos, frenos y el mecanismo de plegado y despliegue antes de cada uso;
- Agarre el manillar con las manos y tire hacia atrás 2-3 veces para comprobar si el mecanismo de plegado está firmemente bloqueado;
- Sujete el manillar con ambas manos mientras conduce, de lo contrario podría lesionarse al perder el equilibrio. No monte en un pie;
- Preste atención a los obstáculos mientras conduce, evite colisiones;
- Conduzca a baja velocidad en carreteras no convencionales, como badenes;
- Reduzca la velocidad y frene si es necesario para controlar la velocidad cuando vaya cuesta abajo;
- Utilice el scooter solo en carreteras planas;
- Cuanto más rápido conduzca un scooter, mayor será la distancia de frenado necesaria. Empiece a frenar a tiempo y no se arriesgue;
- NO utilice el scooter fuera de la carretera;
- NO conduzca bajo la lluvia, suelo mojado, niebla o clima resbaladizo;
- NO cuelgue objetos pesados del manillar;
- NO monte en más de una persona (incluidos los niños);
- NO pise el mecanismo de plegado durante la conducción;
- NO monte sobre escalones u obstáculos ni haga acrobacias durante la conducción;
- NO toque el motor de la rueda delantera, ya que puede calentarse mucho después de conducir;
- NO presione el botón del acelerador / pedal del acelerador mientras camina;
- Obedezca todas las leyes y reglamentaciones locales de tráfico y scooters;
- CONSULTE LAS LEYES LOCALES RELATIVAS AL USO DE SCOOTER. Consulte las leyes y normativas locales para saber dónde y cómo puede utilizar su scooter legalmente. NO viaje en el carril de vehículos motorizados o incluso en la carretera;
- NO abra ni perfora la caja de la batería para evitar el riesgo de cortocircuito causado por objetos metálicos que toquen los contactos de la batería;
- No abra ni reemplace ninguna pieza. En caso de problemas o necesidad de reparación o mantenimiento, consulte a su agente de ventas;
- Utilice únicamente el adaptador de corriente original para cargar, de lo contrario existe riesgo de daño o incendio;
- La eliminación inadecuada de las baterías usadas puede contaminar el medio ambiente. Respete las normativas locales para la eliminación de baterías;
- NO coloque la batería en un ambiente de alta o baja temperatura. NO arroje la batería al fuego. De lo contrario, la batería puede fallar, sobrecalentarse, incendiarse o incluso explotar;
- Cargue completamente la batería del scooter antes de guardarla durante un período prolongado. Cargue la batería por completo al menos una vez cada 90 días si el scooter no se utiliza ni se almacena;
- Temperatura de funcionamiento: -10 ° hasta 40 °. Temperatura de almacenamiento: -20 ° hasta 50 °;
- NO lave el scooter con ningún tipo de líquido.



Avertissements (Français):

- Il existe des risques lors de l'utilisation de ce produit. Portez un casque, des genouillères, des coudières et d'autres équipements de protection;
- Roulez à une vitesse appropriée et soyez conscient des dangers potentiels;
- Vérifiez la pression d'air sur les pneus, les freins et le mécanisme de pliage et de dépliage avant chaque sortie;
- Saisissez le guidon avec vos mains et tirez 2 ou 3 fois vers l'arrière pour vérifier si le mécanisme de pliage est fermement verrouillé;
- Tenez le guidon à deux mains lorsque vous roulez, sinon vous risquez de vous blesser en perdant l'équilibre. Ne roulez pas sur un pied;
- Faites attention aux obstacles lors de la conduite, évitez les collisions;
- Rouler à basse vitesse sur des routes non conventionnelles telles que des dos d'âne;
- Réduisez la vitesse et freinez si nécessaire pour contrôler la vitesse en descente;
- N'utilisez le scooter que sur des routes plates;
- Plus vous roulez vite sur un scooter, plus la distance de freinage dont vous avez besoin est longue. Commencez à freiner à l'heure et ne prenez aucun risque;
- N'utilisez PAS le scooter hors route;
- NE conduisez PAS sous la pluie, le sol mouillé, le brouillard ou le temps glissant;
- NE PAS suspendre d'objets lourds au guidon;
- NE PAS conduire plus d'une personne (y compris les enfants);
- NE PAS marcher sur le mécanisme de pliage pendant la conduite;
- NE PAS monter sur des marches ou des obstacles ou faire des acrobaties pendant la conduite;
- NE touchez PAS le moteur de la roue avant, car il peut devenir très chaud après avoir roulé;
- NE PAS appuyer sur la pédale d'accélérateur / bouton d'accélérateur en marchant;
- Respectez toutes les lois et réglementations locales en matière de circulation et de scooter;
- VÉRIFIEZ LES LOIS LOCALES CONCERNANT L'UTILISATION DU SCOOTER. Consultez les lois et réglementations locales pour savoir où et comment vous pouvez utiliser votre scooter légalement. NE PAS rouler sur une voie de véhicule à moteur ni même sur une autoroute;
- NE PAS ouvrir et percer le boîtier de la batterie pour éviter le risque de court-circuit causé par des objets métalliques touchant les contacts de la batterie;
- N'ouvrez ni ne remplacez aucune pièce. En cas de problème ou besoin de réparation ou d'entretien, consultez votre agent commercial;
- Utilisez uniquement l'adaptateur secteur d'origine pour charger, sinon il y a des dommages ou un risque d'incendie;
- Une mise au rebut incorrecte des piles usagées peut polluer l'environnement. Respectez les réglementations locales relatives à la mise au rebut des batteries;
- NE placez PAS la batterie dans un environnement à haute ou basse température. NE PAS mettre la batterie dans le feu. Sinon, la batterie peut tomber en panne, surchauffer, prendre feu ou même exploser;
- Chargez complètement la batterie du scooter avant de la ranger pendant une longue période. Chargez complètement la batterie au moins une fois tous les 90 jours si le scooter n'est pas utilisé et stocké;
- Température de fonctionnement: -10 ° à 40 °. Température de stockage: -20 ° à 50 °;
- NE PAS laver le scooter avec quelque liquide que ce soit.



Avvertenze (Italiano):

- Ci sono rischi durante l'uso di questo prodotto. Indossare casco, ginocchiere, gomitiere e altri indumenti protettivi;
- Guidare alla velocità corretta ed essere consapevoli dei potenziali pericoli;
- Controllare la pressione dell'aria su pneumatici, freni e meccanismo di apertura e chiusura prima di ogni uscita;
- Afferrare il manubrio con le mani e tirare indietro 2-3 volte per verificare se il meccanismo di chiusura è saldamente bloccato;
- Tenere il manubrio con entrambe le mani durante la guida, altrimenti si rischia di ferirsi perdendo l'equilibrio. Non guidare su un piede;
- Prestare attenzione agli ostacoli durante la guida, evitare la collisione;
- Guidare a bassa velocità su strade non convenzionali come dossi;
- Ridurre la velocità e frenare se necessario per controllare la velocità in discesa;
- Utilizzare lo scooter solo su strade pianeggianti;
- Più velocemente guidi uno scooter, maggiore è lo spazio di frenata di cui hai bisogno. Inizia a frenare in tempo e non correre alcun rischio;
- NON utilizzare lo scooter fuoristrada;
- NON guidare sotto la pioggia, terreno bagnato, nebbia o tempo scivoloso;
- NON appendere oggetti pesanti al manubrio;
- NON guidare più di una persona (bambini inclusi);
- NON calpestare il meccanismo di piegatura durante la guida;
- NON salire su gradini o ostacoli o fare acrobazie durante la guida;
- NON toccare il motore della ruota anteriore, poiché potrebbe diventare molto caldo dopo la guida;
- NON premere il pedale dell'acceleratore / pulsante dell'acceleratore mentre si cammina;
- Rispettare tutte le leggi e i regolamenti locali sul traffico e sugli scooter;
- VERIFICARE LE LEGGI LOCALI IN MATERIA DI UTILIZZO DELLO SCOOTER. Verificare le leggi e le normative locali per vedere dove e come è possibile utilizzare legalmente lo scooter. NON guidare sulla corsia di un veicolo a motore o anche in autostrada;
- NON aprire e forare il vano batteria per evitare il rischio di cortocircuito causato da oggetti metallici che toccano i contatti della batteria;
- Non aprire o sostituire alcuna parte. In caso di problemi o necessità di riparazione o manutenzione, consultare il proprio agente di vendita;
- Utilizzare solo l'adattatore di alimentazione originale per caricare, altrimenti c'è danno o rischio di incendio;
- Lo smaltimento improprio delle batterie usate può inquinare l'ambiente. Attenersi alle normative locali per lo smaltimento delle batterie;
- NON posizionare la batteria in un ambiente ad alta o bassa temperatura. NON mettere la batteria nel fuoco. In caso contrario, la batteria potrebbe guastarsi, surriscaldarsi, prendere fuoco o addirittura esplodere;
- Caricare completamente la batteria dello scooter prima di riporlo per un lungo periodo. Caricare completamente la batteria almeno una volta ogni 90 giorni se lo scooter non viene utilizzato e conservato;
- Temperatura di esercizio: da -10 ° a 40 °. Temperatura di stoccaggio: da -20 ° a 50 °;
- NON lavare lo scooter con alcun tipo di liquido.



Waarschuwingen (Nederlands):

- Er zijn risico's verbonden aan het gebruik van dit product. Draag helm, kniebeschermers, elleboogbeschermers en andere beschermende uitrusting;
- Rijd met de juiste snelheid en let op mogelijke gevaren;
- Controleer voor elke rit de luchtdruk van de banden, remmen en het in- en uitvouwmecanisme;
- Pak het stuur met uw handen vast en trek het 2-3 keer terug om te testen of het vouwmecanisme goed vergrendeld is;
- Houd het stuur tijdens het rijden met beide handen vast, anders kunt u door evenwichtsverlies letsel oplopen. Rijd niet op één voet;
- Let tijdens het rijden op obstakels, vermijd aanrijdingen;
- Rijd met lage snelheid op onconventionele wegen, zoals verkeersdrempels;
- Verlaag de snelheid en rem indien nodig om de snelheid te beheersen bij het afdalen;
- Gebruik de scooter alleen op vlakke wegen;
- Hoe sneller u op een scooter rijdt, hoe langer de remweg die u nodig heeft. Begin op tijd te remmen en neem geen enkel risico;
- Gebruik de step/scooter NIET off-road (terrein of slechte wegdek);
- Rijd NIET in de regen, natte grond, mist of glad weer;
- Hang GEEN zware voorwerpen aan het stuur;
- Rijd NIET met meer dan één persoon (inclusief kinderen);
- Stap tijdens het rijden NIET op het vouwmecanisme;
- Rijd NIET op trappen of obstakels en voer GEEN stunts uit tijdens het rijden;
- Raak de voorwielmotor NIET aan, aangezien deze na het rijden erg heet kan worden;
- Druk tijdens het lopen NIET op de gaspedaal- / gaspedaalknop;
- Houd u aan alle lokale wetten en voorschriften voor verkeer en stappen;
- **CONTROLEER DE PLAATSELIJKE WETGEVING MET BETREKKING TOT HET GEBRUIK VAN SCOOTERS.** Controleer de lokale wet- en regelgeving om te zien waar en hoe u uw step/scooter legaal mag gebruiken. Rijd NIET op de rijstrook van motorvoertuigen of zelfs op de snelweg;
- Open en doorboor de batterijhouder NIET om het risico van kortsluiting te vermijden als gevolg van metalen voorwerpen die de batterijcontacten raken;
- Open of vervang geen enkel onderdeel. Raadpleeg bij problemen of reparatie of onderhoud uw verkoopagent;
- Gebruik alleen de originele stroomadapter om op te laden, anders bestaat er kans op schade of brand;
- Onjuiste verwijdering van gebruikte batterijen kan het milieu vervuilen. Houd u aan de plaatselijke voorschriften voor het weggooien van batterijen;
- Plaats de batterij NIET in een omgeving met hoge of lage temperaturen. Gooi de batterij NIET in het vuur. Anders kan de batterij defect raken, oververhit raken, in brand vliegen of zelfs ontploffen;
- Laad de accu van de step/scooter volledig op voordat u deze voor langere tijd opbergt. Laad de accu ten minste eenmaal per 90 dagen volledig op als de step/scooter niet wordt gebruikt en opgeslagen;
- Bedrijfstemperatuur: -10 ° tot 40 °. Opslagtemperatuur: -20 ° tot 50 °;
- Was de step/scooter NOOIT met een vloeistof.



Mensfortweg 26

5627BR Eindhoven, Netherlands

www.rollzone.eu