


Installation Steps: _____

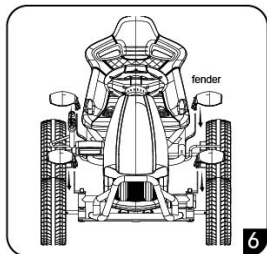

6. Install the fender

a: Insert the fender into the iron and insert it in place.as PIC 6

Attention _____

- It shall not be used in dangerous areas such as streets, roads, slopes, and gullies.
- Please do not use on smooth surface, such as marble and floor tiles.
- This product is limited to one person, not overload, and the maximum load is 30kg.
- Don't use it indoors, so as not to crash furniture or make kids wrestle.

Maintenance _____

1. Please check whether the packing components are complete before assembling. If there is any shortage, please contact our company quickly.
2. When you install and use all components, please check regularly.
3. Please clean the product regularly. Be careful not to destroy the original.
4. For your baby's safety, please check and maintain the car regularly.

Criteria of product operation: EN71 ASTM F963


**Certificate
of approval**

Checker: _____

Date: _____

CHILDREN'S PEDAL GO KART

Installation and Operation Instruction

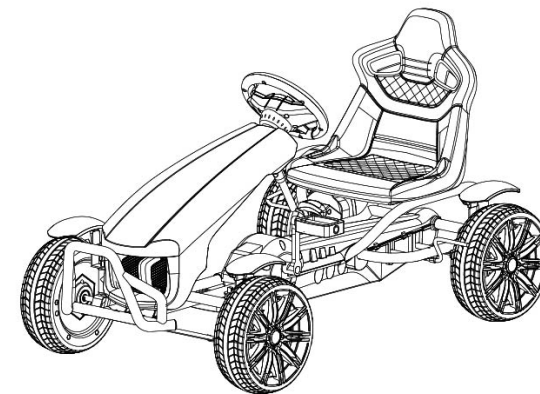

Picture is for reference only, and the product is subject to practicality.

Would you please to read this specification carefully before installation in order to avoid operating errors or damages. Make sure that the baby will be safe. The user should safekeeping the specification.


Car type	
Suit age	37-96 months
Max weight	30kg
Size	120×64×70cm

⚠ WARNING


- Put small parts out of the young children's reach.
- Installation should be done by adults.
- To avoid the danger of small parts injury and accidental swallowing, Please keep the small parts far away from children under 3 years old.
- .The children can not drive alone without adults.
- Put the plastic bags far away form the children.
- The instruction is important, please don't throw away.

1

Parts Names

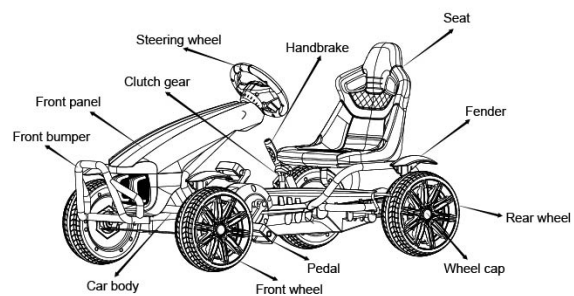


Installation Steps:

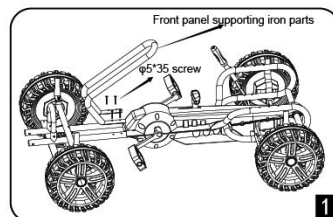

1. Install panel supporting iron parts.

- Place the supporting iron into the car body Make sure the hole is aligned.as PIC 1
- Then insert a screw with 5*35mm in each hole position.
- Finally tightened with the M5 nut.

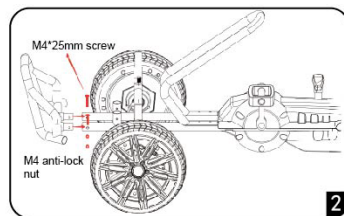


2. Install the front bumper

- Inserting the bumper into the car body.Make sure the hole is aligned.as PIC 2.
- Then put the screw M4*25 into the hole .Finally, tighten it with the M4 anti-lock nut.


2

Installation Steps:

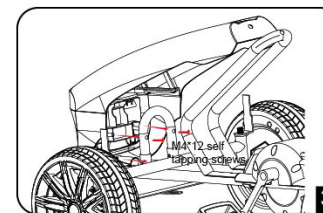

3. Install the front panel


- Insert the front panel into the iron pipe and push the two screws into the iron hole position.
- Finally, use two M4*12 self tapping screws to lock the front panel.

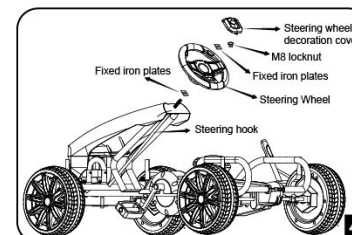

4.Install the steering wheel and steering hook

- Put a gasket on top of the steering hook and then put the steering hook from bottom to top as PIC 4

- Finally, put a fixed iron plate firstly , then put it into the steering wheel, and then put a fixed iron plate in the direction plate, and then tighten it with the M8 anti-lock nut
- Finally cover the steering wheel decoration.

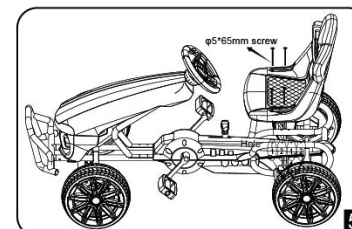

5.Install the seat

- Put the seat on car body and put the screw 5*65mm.into hole as PIC5
- Finally, tighten it with the M5 lock nut.

3